







MODEL ROCKET INSTRUCTIONS


KEEP FOR FUTURE REFERENCE


IMPORTANT: Please record date found on box and keep for future reference.

READ ALL INSTRUCTIONS. Make sure you have all parts and supplies.

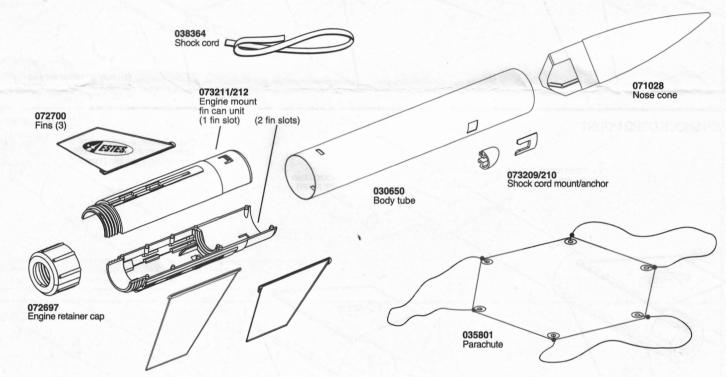

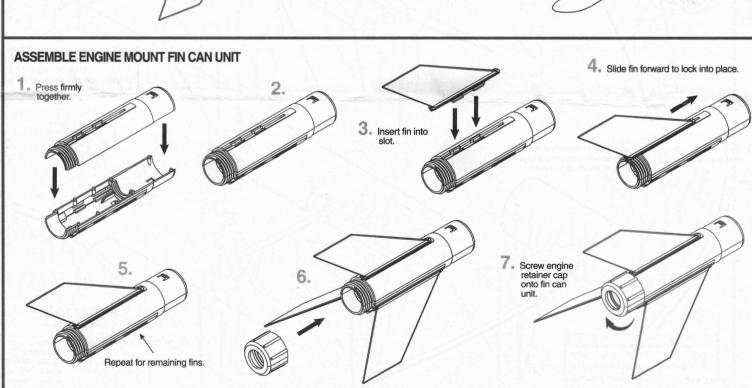

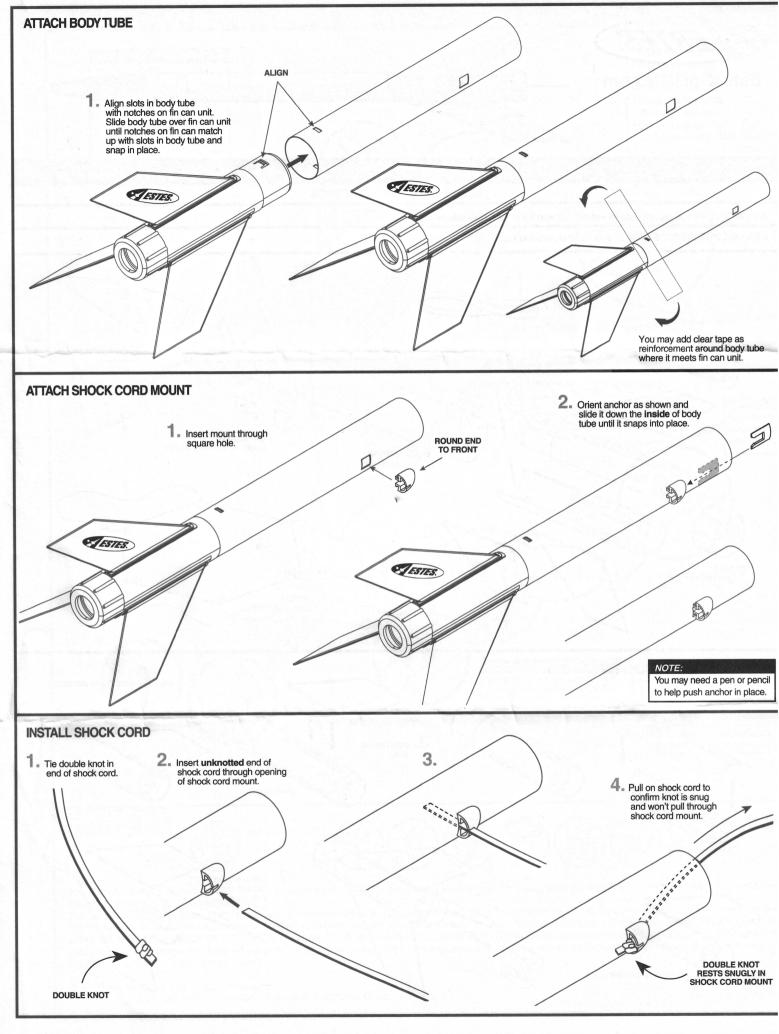

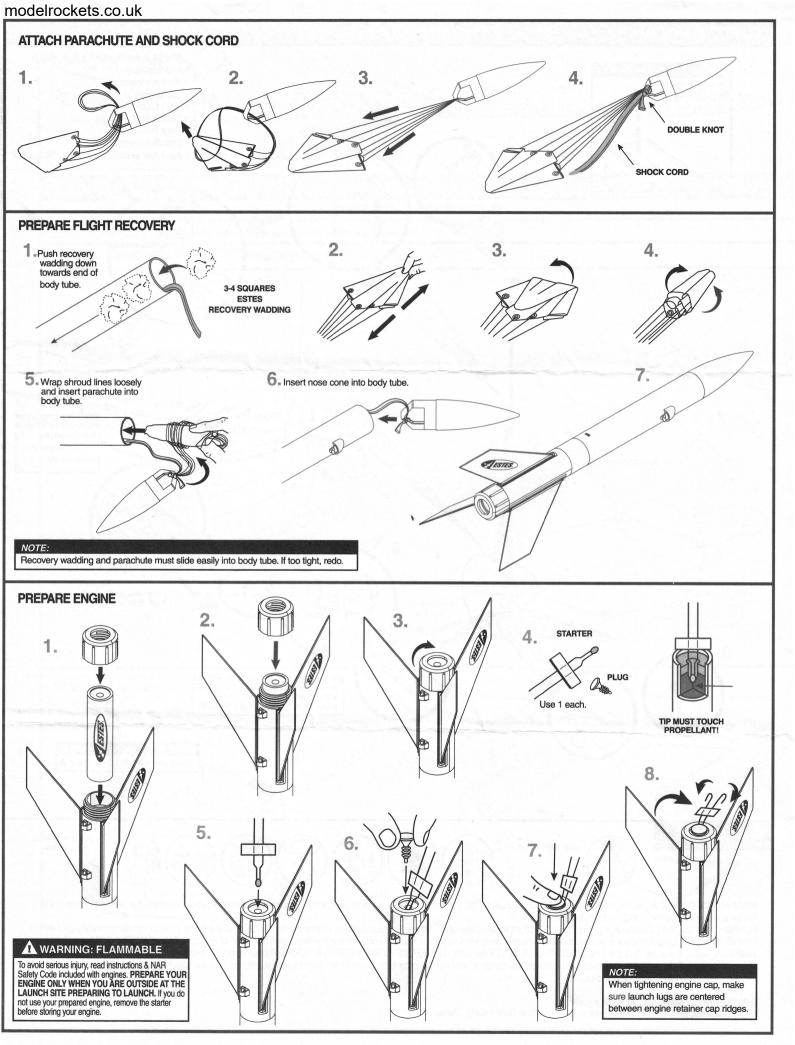

COUNTDOWN AND LAUNCH ESTES LAUNCH SUPPLIES NEEDED (Sold Separately) NOTE: Key always out until Recovery Wadding final countdown! Launch Pad Launch Controller · Starters (with engines) Plugs (with engines) Estes[®] Engines: A8-3 (first launch), B4-4, B6-4, C6-5, C6-7 NOTE: Fully extend your launch controller wire before launching. KEY 6. .3...2...1 Insert key, push down hard. Bulb will light. While holding key down FIRMLY, press launch button until LIFTOFF! NOTE: Estimated weight: 1.3 oz. (36.9 g)

PRECAUTIONS



NAR SAFETY CODE













NO DRY GRASS OR WEEDS

PRE-LAUNCH CHECK For safety, never launch a damaged rocket. Check the rocket's body, nose cone and fins. Also, check the engine mount, recovery system and launch lug(s). Repair any damage before launching the rocket.

FLYING YOUR ROCKET Choose a large field (500 ft. [152 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Football fields and playgrounds are great. Launch only with little or no wind and good visibility. Always follow the National Association of Rocketry (NAR) SAFETY CODE (enclosed).

MISFIRES TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the micro clips and remove the engine. Take the plug and starter out of the engine. A burned starter means the starter tip was not touching engine propellant. Install a new starter; be sure the tip is touching propellant inside engine. Repeat the steps under Countdown and Launch.

© 2019 Estes Industries, LLC. All rights reserved. Estes Industries, LLC. 1295 H Street, Penrose, CO. Made in Guangdong, China.



PN 090004-1714 (8-19)