jelly legic ALTIMETERONE

The scientific way to measure how high things fly















Quick Start

Welcome!

This is the second generation of the very popular AltimeterOne. For this version, we increased the size of the battery and moved to a more advanced bitmapped display. There's also a new History feature that lets you review your last 100 flights.

This guide was designed to get you started. More complete information is available online at **www.jollylogic.com**. You can also shop for accessories and read stories about how others are using AltimeterOne on our News page.

We'd love to hear from you, as well.

Happy flying!



John Beans Founder, Jolly Logic Danville, California john@jollylogic.com

- A quick button click turns it on and off
- 2 Hold the button to open the menu...



- 3 ...and let go to choose an item
- 4 Select Launch before each flight
- When you see Ready it's ready to fly!



Recharging

Plug the AltimeterOne cable into any USB port to recharge. If you don't see a light when you plug it in, the USB port must not have power. Try another one



Red Light

Your altimeter is charging correctly. Recharging should be complete in less than 2 hours.



Green Light

Your altimeter is 100% charged.



Red + Green Light

Problem! Either this USB port is not providing enough power, or your battery has a problem.

- . Try another USB port.
- Open your altimeter and make sure the battery connector is snapped in. See our website for instructions on how to do this.
- 3. Contact support@jollylogic.com.

Frequently Asked Recharging Questions

Does It Hurt to Charge It All the Time?

Nope. In fact, Lithium Polymer batteries like the one in the AltimeterOne prefer to be charged all the time, and there's no "memory effect" to worry about.

What Type of Connector Does Altimeter One Have?

The very common USB Micro-B

Can I Use My Own Charger?

Sure. AltimeterOne needs less current than most devices (about 90 milliamps), so if you happen to already have a USB charger for something you own (like your phone or a headset), you can use that for AltimeterOne. Electronics stores usually have a nice selection of "USB Micro-B" rechargers.

Why Does the Red Light Come On Every Time I Plug It In?

Even when it is 100% charged, the red light will come on when you first plug in AltimeterOne while the recharging logic checks the status of the battery. In just a few moments, it will turn green again. This is normal behavior.

Will the Battery Eventually Wear Out?

Well, yes, all batteries wear out. If your battery life drops below 4 hours, you should consider replacing it. This is a unique battery; Jolly Logic is the only place you can get a replacement. See our website for instructions.

4 jølly logie 5

Visual Tour

Attachment Point ...

Here is where you fasten your altimeter.

(Also, see the Mounting Tips section.)

·Display

ALTIMETER

Displays the peak altitude after each flight, and the current battery charge level.

Be sure to select Launch and see "Ready" before each flight.



Push Button

- Quick press for ON/OFF
- Hold the button to see more options.
 Release the button to pick an option:

Menu Launch History Realtime

Erase

Lance

Begin next flight

Show last 100 flights, most recent first

Begin next flight, with realtime altitude

Switch between feet and meters

Erase all flights from memory

... Leave menu, do nothing

Recharging Connector

This is a USB Micro-B port. Plug the included cable into standard USB ports to recharge.

See the Recharging section for more info.

Mounting Tips

Let It Breathe: Air Holes in Containers

AltimeterOne uses an atmospheric pressure sensor to detect altitude, so it needs to be exposed to outside air pressure. If you put it in a container, or if your flying model is airtight, be sure to add a few holes to allow air to escape at altitude.

The larger the airspace is in your model, the larger the holes should be. Remember: if your model can rapidly gain or lose altitude, your vent holes need to allow air to rapidly enter and exit the enclosure.

Avoid Really Strong Airflow

Rapid gusts of wind and turbulence can create pressure waves that can sometimes confuse AltimeterOne and result in odd readings.

If you experience odd readings and are exposing AltimeterOne to airflow during flight, try wrapping it in a little fabric pouch to break up the airflow around it.

Specialized Mouting Accessories

Check the Jolly Logic website for mounting accesories such as the Snap Mount. The Snap Mount can be taped, screwed, or attached with Velcro™ to hold it in place. AltimeterOne can then be quickly snapped in place.

Other Jolly Logic resellers may offer their own specialized mounting accessories for activities such as falconry.



Basic Flight Instructions

Before Each Flight

- Press and hold the button to bring up the menu
- 2 Let go of the button when you see Launch

You should see Ready on the screen.

You are ready to fly!



After Each Flight

- O You will see the maximum altitude reached during flight
- The flight has been stored; you can turn the altimeter off or perform other activities safely.

Flight Logic

- When you select Launch or Realtime, AltimeterOne considers the current altitude of the altimeter to be Ground Level. For ultimate accuracy, enter these modes right at actual ground level.
- AltimeterOne ignores flights of less than 30 feet.
- AltimeterOne will automatically turn off after 2 hours from the time that the button was last pressed OR a new peak altitude was detected.
- AltimeterOne will continue to look for a peak altitude even if your flight descends and then goes back up several times during the flight.
- If a flight rises above 100 feet and then descends below 30 feet for 5 seconds, the flight is automatically considered over. AltimeterOne will save the maximum altitude and stop looking for a new one.

Using Other Features

Realtime Mode

- Just like selecting Launch, EXCEPT
- It also shows the current distance above ground level onscreen

One of the most common uses of Realtime Mode is for videos: if you put AltimeterOne within view of the camera, you can record the altitude on your video.

The altitude shown is the height above ground level (when you select Realtime, the current altitude of the altimeter is set as "ground level.")

The peak altitude is still stored, just like a regular flight using Launch.

To leave Realtime Mode, turn AltimeterOne OFF and then back ON again. Don't worry—the last flight is saved automatically.

History

When you select History, Altimeter One will begin showing you the last 100 flights (if there are that many saved), starting with the most recent flight.

To leave History Mode, just click the button once.

Units

Selecting Units from the menu will switch from measuring in Feet to Meters, or from Meters to Feet. There is no loss of data in switching back and forth, and your choice of units is also used when flights are reviewed in History.

The Units setting will stay the same until you change it.

Erase

Removes all flight data from memory. Be careful—this cannot be canceled.

Support and Troubleshooting

For More Support

More info is available at www.jollylogic.com, including helpful videos, tutorials, FAQs, and troubleshooting guides.

Have questions or suggestions? Contact us at **support@jollylogic.com**.
We'd love to hear from you, including your experiences with AltimeterOne.

Spare Parts

The plastic case, LCD display, and battery are user-replaceable. If you damage your AltimeterOne, please see www.jollylogic.com to order replacement parts and to see repair instructions.

Legal Notices

Copyright © 2014 Jolly Logic, LLC.

Velcro is a registered trademark of Velcro Industries B.V.

iolly logic **altimeterone**



- Measures peak altitude to 29,500 feet (9000 m)
- Stores 100 flights
- Rechargeable from any USB port
- Great for quadcopters, rockets, planes, helicopters, gliders, kites, hawking, and falconry

Visit www.jollylogic.com for complete information

ATTENZIONE! AVERTISSEMENT!

WARNUNG! WARNING!

ADVERTENCIA!

Tischio di sofficiamento Contiene piccole parti. Von edatto a bambini di esti rifortre a 3 anni. Tisque de sufficiationi Petite pièces. Ne convient pas à un enfant de moins de 3 ans. Tristichunggejethi Vershiucichare Kelintele. Nicht pesignet für Kinder unter 3 Jahren. Disching Hazardi Small parts. Not for children under 3 years.

Inadecuado para niños menores de 3 añ

A PARTIRE DAI 14 ANNI

14 + AB 14 JAH FOR AGES









jolly logic

ijollylogic.com